


COMPONENTS	Actions to be taken	FREQUENCY
DRIVES	<ul style="list-style-type: none"> <li>◦ Chain tension and alignment: remove the chain to check that there are no tight spots.</li> <li>◦ Chain and roller lubrication: with diesel or Teflon-TPFE base oil.</li> </ul>	Before each sowing campaign
DOUBLE-DISCS OPENERS	<p>Protective tip: to be changed if deformed  Contact area between discs <math>\geq</math> 4-5 cm,  <math>\varnothing \geq</math> 360mm. (Attention, inverted thread on the left of the unit)  Scraper: adjust in contact on the disc, change if worn  Gauge wheel scraper: set at 5mm from the wheel</p>	Weekly
GAUGE WHEELS	<ul style="list-style-type: none"> <li>◦ Check clearance and contact with disc openers</li> <li>◦ Maintain contact by adjusting the number of shim washers</li> </ul> <p>Attention, inverted thread on the left of the unit</p>	Before each sowing campaign
SHOE AND TIPS	<p>Shoe or tips : change if rounded</p> 	Before each sowing campaign
CHUTE	No wear tolerated	Before each sowing campaign
SEED COUNTING SENSOR	Clean with compressed air, with a clean, damp cloth or a soft brush	Every 2 days